
MEDOUSÊ

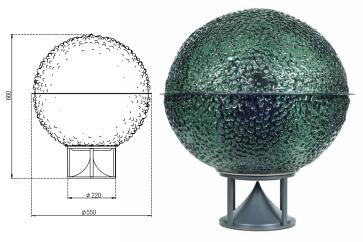



SOUND OUTPUT

Speaker type

6" dual-concentric speaker

Nominal impedence

80

Crossover

two way on board

Frequency range

56-20.000 Hz (-6dB)

Sensitivity (1W-1m)

89 dB

Speaker Peak Power

300W

Speaker RMS Power

Recommended amplifier power

200W (Class D)

SUBWOOFER SOUND OUTPUT

Speaker type

6" Woofer

Nominal impedence

80

Crossover

no crossover on board - DSP needed (HP 35 Hz 12dB/oct min; LP 120 Hz 12 dB/oct min)

Frequency range

50-150 Hz (-6dB)

Sensitivity (1W-1m)

Speaker Peak Power


Speaker RMS Power

150W

Recommended amplifier power

200W (Class D)

Unpacking: to remove the Medousê from the wooden shipping box carefully follow these steps:

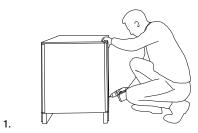

Unscrew the screws in the lower part of the wooden box, to release the cover from the base.



Remove the cover of the box taking maximum care not to damage the glass dome.



Hold the Medouse firmly, lift it and gently pull the base out from the foam packaging and place into position.

Output cable: Medousê is shipped from the factory with a high performance plug/socket connector (IP68, IP69K) already attached. The plug (male endend) is connected to the bipolar cable of the sound module and the socket (female ended) will have to be connected to the cable going to the amplifier during final installation.

Disassembled socket (female ended)









Please keep to the following instruction to connect the socket (female ended) to your cable:

- disassemble the socket as in the image above.
- connect the positive wire (+) into the hole labelled 1 (take the little pin next to the hole as a reference).
- connect the negative wire (-) into the hole labelled 2.

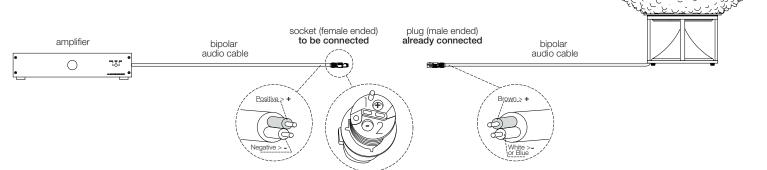

Quick push-pull connection and disconnection:

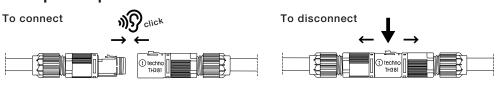

- 1. Push the plug connector into the socket connector untill fully seated
- 2. A noise is the proof of correct matching
- 3. Apply gentle traction between plug and socket to ensure they are well hooked
- 4. To disconnect simply press the release button and pull.



LED module: 1x29W

Rated output

29W

Power supply

voltage 220-240V, no driver required dimmable

SPECIFICATIONS

Material

hand-made glass sphere in areen colour

Base material

aluminum, brass, stainless steel


Dimensions

550 x 660 mm

Weight

40 kg (31 kg glass)


The Medouse's base has two different cables coming out from two different legs, the acoustic and the electrical cable, arriving to the speaker either horizontally or from underground. The electrical power supply is contained within the glass body, but on request it can be placed external.

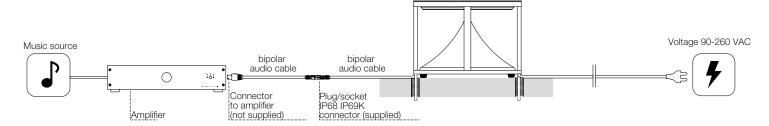


Diffusion and directionality:

Medousê is characterized by a dual-concentric 6" transducer, where the mid-woofer and the tweeter share the same axis, to achieve a virtually punctiform source, linear and time coherent, which, combined with the deflection system, ensures an ideal omnidirectional emission. The result is a very natural sound, not constrained to any fixed and obligated listening positions, with an amazing quality and clarity unusual in outdoor environments.

It is recommended to place these modules, either indoor or outdoor, directly on the floor; indoor it is usually recommendable to position them at least 0,6-1 meter from each wall to enhance soundstage and clarity.

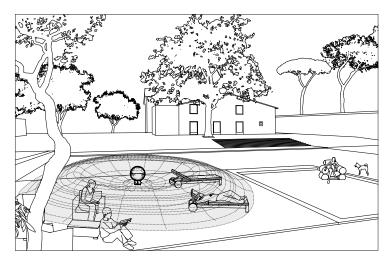


Anti-theft system: When installing the Medousê outdoor, especially in public spaces, specifically designed anti-theft systems are available on demand to secure the module to the ground. In the case of outdoor installations on grass or soil proceed as follows:

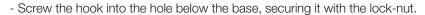



- Dig one hole, approx. 50 cm deep, and fill it with concrete for approx. 2/3 of its depth.

- Put hook into hole till the base sits properly on the ground.

- Let concrete dry and fill hole with soil.

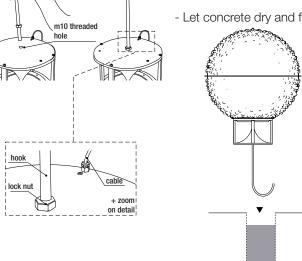

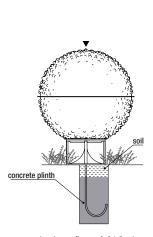

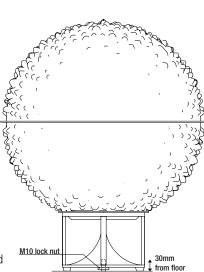

In the case of installations on hard floors, like stone or wood, it is recommended to fix a M10 threaded head on the ground on which to screw and unscrew the Medousê through the appropriate threaded hole below the base, securing it with a proper locknut. Make sure the screw comes out 30 mm from the floor.

Maintenance and care: to keep your speakers beautiful as long as possible, we warmly recommend doing maintenance at least once a year. When not in use, sound modules should be appropriately covered or stored away; heavy duty protective covers are available from AS.

Please refer to the General Manual for appropriate instructions and note that any departure from our recommendations on care and cleaning, or any evidence of misuse or damages from ordinary wear and tear, will void all warranty claims.

